

Baron

Ergonomic Mesh Chair

Instructions for Use

Thank you very much for purchasing this Okamura product. We take all possible measures to ensure quality, however, in order to use this product correctly, please read this instruction manual thoroughly and understand its contents before use.



okamura

For safe use (Be sure to read the following.)

Symbol indications

In this instruction manual and when displaying on the product, we use various symbols in order to show the correct and safe usage and so as to avoid harm to you, other persons or any damage to property. The symbols and their meanings are as follows. Please understand the contents thoroughly before reading this instruction manual.

⚠ Caution

Inappropriate use of the product as a result of ignorance of this indication could cause possible injury or physical damage. It also indicates details which could be expected to result in severe injury.

⚠ Caution

Avoid rough handling, and do not use for purposes other than that intended.

If objects are placed on the seat and it is used as a cart, there is a danger of it overturning causing an accident or the objects falling. Do not stand on the chair or sit on the very front lip of the seat or the armrest. There is a risk of you falling resulting in injury.

Disassembly and repair

The height adjustment device (gas spring) contains high-pressure gas, so in case of malfunction, please be sure to contact your dealer as disassembly and repair by yourself is very dangerous.

 
Note on modification

Modifying by yourself may cause a safety problem, so please contact your dealer before doing so. Please take all necessary safety considerations at your own responsibility for any modification performed without our agreement.

Be careful not to get your fingers or hand caught in the gaps of the reclining device underneath seat.

Using on plastic tiles

Please use polyurethane casters on tile floors since the nylon casters are slippery and may cause a fall. The nylon casters are suitable for rugs and carpeted floors, etc.

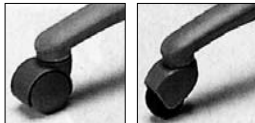


Nylon casters

Polyurethane casters

Note on using adjustable armrests

 When you adjust the position of the armrests, be careful not to get your fingers, hand or clothes caught in the gaps between the moving parts or at the back of the pad. Also, please make sure that the arms are secured firmly before use.

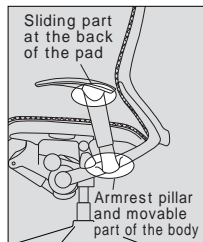

Important notes on location of use

Please use this chair indoors.

Do not use this chair outdoors or where it can get wet since use at these locations can cause problems such as warping and mold.

Avoid placing this chair in locations where it will be exposed to direct sunlight, since this can cause deformation and discoloration due to sun damage.

If you place it near a window, always protect it from direct sunlight using curtains or blinds etc.

Avoid placing this chair in a location where it will be subjected to high temperature, humidity or extremely dry conditions, since these can cause deformation, discoloration or mold.

Avoid placing this chair in a location where it will be subjected to direct heat or airflow from heaters or air conditioners, since these can cause deformation or discoloration.

Please place this chair on a level surface.

When placing this chair, make sure to keep it in a horizontal position. If not, it may distort in shape causing falls.

Notes on daily care

If the chair wobbles during use due to loose bolts or screws, tighten screws to improve the life of the chair. Make sure to tighten screws as soon as a problem occurs.

 
Please keep this instruction manual in a safe location for daily reference.

Care for plastic parts

For daily care, wipe frequently with a firmly wrung-out soft cloth. If the chair is exceptionally dirty, wash with a watered-down mild detergent, then wipe away all the detergent with a damp cloth and finally rub dry with a dry cloth.

Care for mesh material and cushion

After tapping the mesh section by hand, use a vacuum cleaner to remove the dust. The cushion can not be dry-cleaned, so if it is exceptionally dirty, we recommend replacement with a new one.

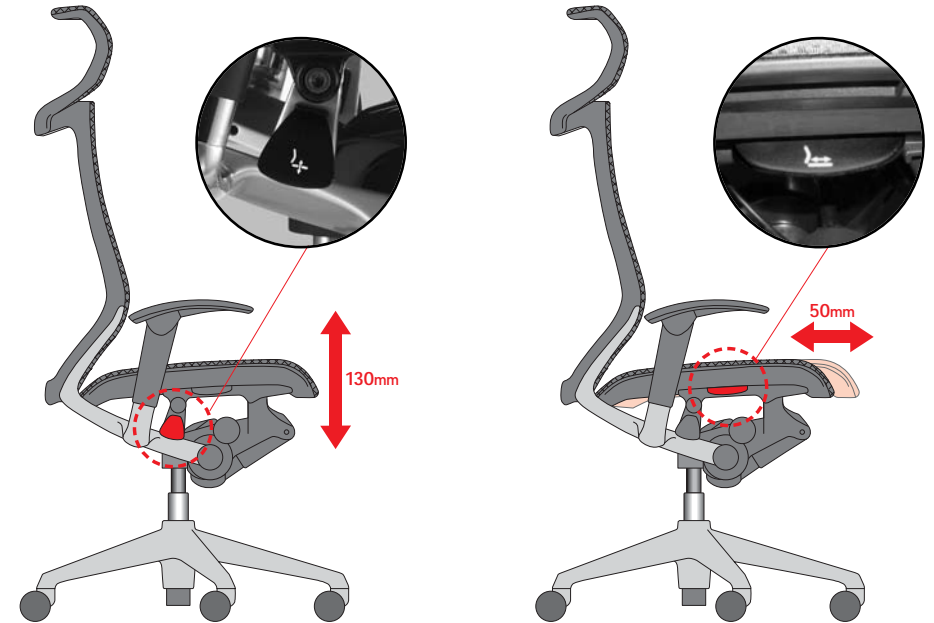

Adjusting the seat height

 
Adjust the seat height using the lever under the right side of the seat. The seat will lower if you grip the lever with your weight on the seat, and it will fix at any position when you release the lever. The seat will be raised if you grip the lever with your weight off the seat.



Adjusting the seat depth

Adjust the seat depth simultaneously lifting the left and right levers under the front of the seat while half-raising the seat. Release the levers when the desired depth is achieved.

After the adjustment, make sure the seat is firmly secured before use.

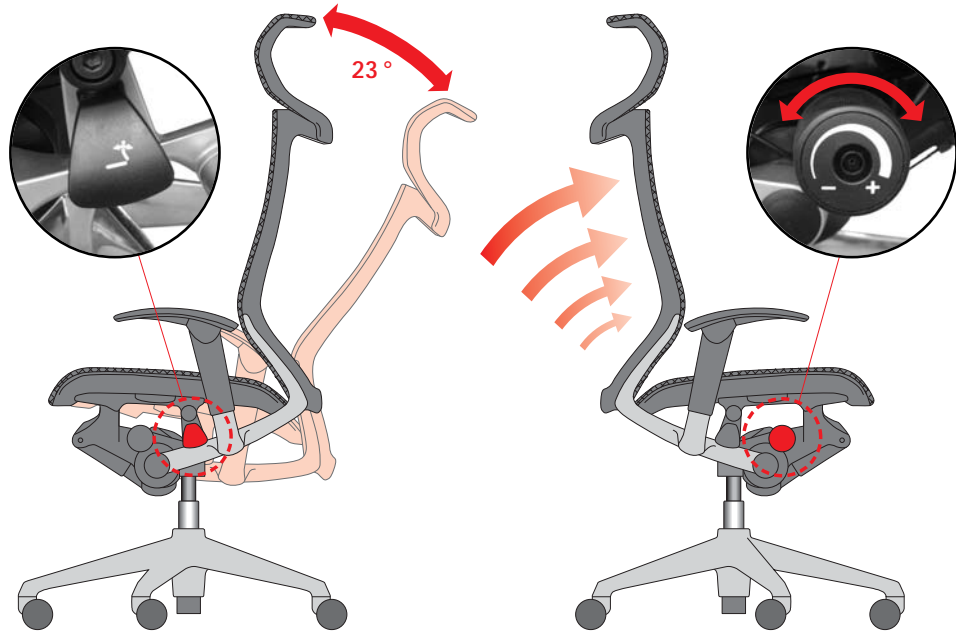


Fixing/releasing the reclining angle

Use the lever under the left side of the seat to adjust the backrest reclining angle. While leaning back against the backrest to the desired angle, pull the lever once to secure that angle. To release it, pull the lever once again, and the backrest will return to the free movement mode.




Adjusting the reclining tension

 Turn the tension adjustment knob under the right side of the seat in the "+" direction to increase the reclining tension. Turn the knob in the "-" direction to decrease it. Adjust the tension according to your physical size and preference.

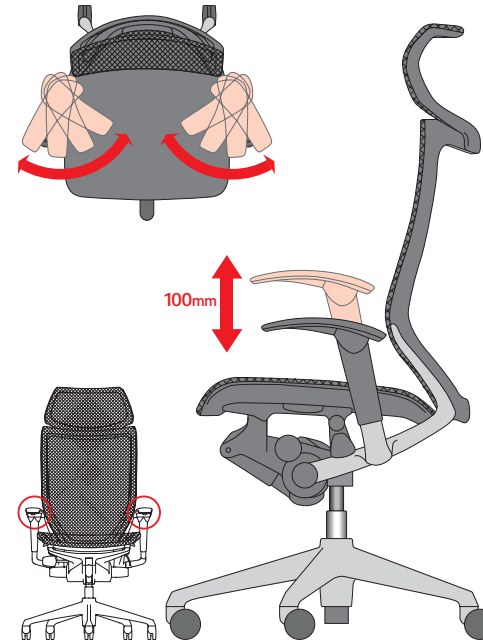

Adjusting the height and angle of the armrests

 Lift the arm pads to adjust the height of the armrests. Lift them to the highest level to return the armrests to the lowest position. You can adjust the horizontal angle of the arm pads in the outward (up to 30 degrees) or inward (up to 60 degrees) directions to suit your purposes.

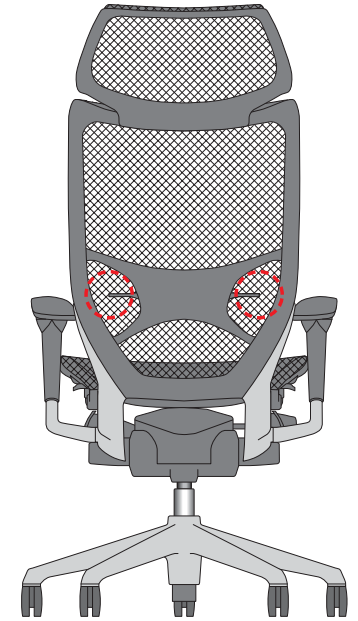

Adjusting the lumbar support

While seated, bring your both hands to the rear of the backrest, then with your back lifted slightly off the backrest, lift or lower the adjustment levers on both sides.

 
Attaching the adjustable armrests

Remove the armless caps using a flathead screwdriver, etc.

Fix the arms from the side using the supplied bolts (one bolt per side).

(Tool required: 6 mm hexagonal wrench)

Make sure the attached parts do not rattle.

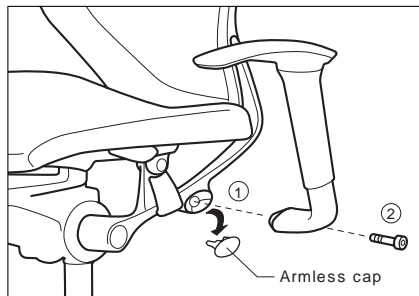


Attaching the headrest

Remove the name plate on the rear top of the backrest frame using a flathead screwdriver, etc.

Insert the headrest from above into the top of the backrest frame while aligning it with the three holes. Make sure it is fully inserted.

Fit the supplied screw plate into the holes at the rear top of the backrest frame, then secure the headrest with the two screws provided. Attach the name plate on the headrest.

 
Make sure the parts do not rattle.

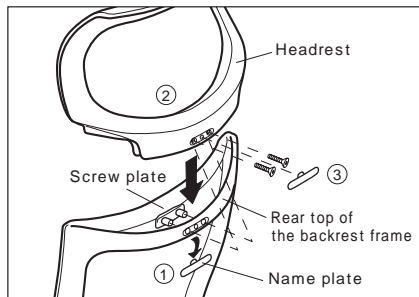

Attaching the lumbar unit

From the back of the chair, fit the lumbar unit between the left and right frames while bending it inwards.

 Insert the four clips of the lumbar unit into the grooves on the inside of the backrest frame. Use the installation guide lines to determine the installation position.

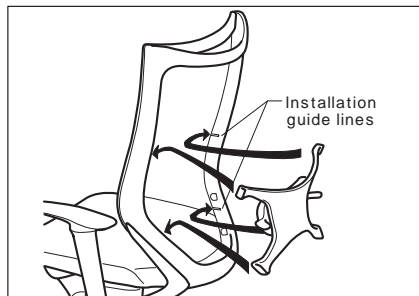

Attaching the garment hanger

 
For low-back and high-back chairs

Remove the name plate on the top of the backrest frame using a flathead screwdriver, etc.

Adjust the height of installation (4 levels) using the grooves on the left and right of the hanger unit. As a guide, install at the lowest level for a low-back chair and the highest level for a high-back chair. Take extra care when setting the height of installation so as not to get your jacket caught between the floor and the casters when the seat is reclined.

Position the hanger unit between the hanger attachment plate and the screw plate, and secure the hanger using the two screws provided. Attach the name plate on the hanger attachment plate.

Make sure the parts do not rattle.

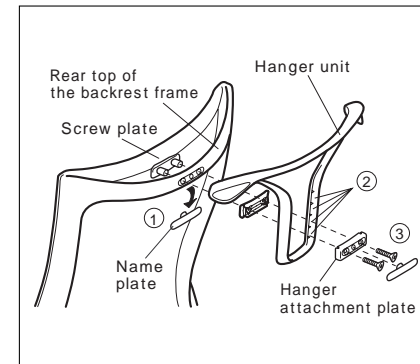


For extra-high back chairs

Remove the name plate from the headrest using a flathead screwdriver, etc. Remove the two screws used to secure the headrest.

Adjust the height of installation (4 levels) using the grooves on the left and right of the hanger unit. As a guide, install at the lowest level for a low-back chair and the highest level for a high-back chair. Take extra care when setting the height of installation so as not to get your jacket caught between the floor and the casters when the seat is reclined.

Position the hanger unit between the hanger attachment plate and the screw plate, and secure the hanger using the two screws which were removed in step 1. Attach the name plate on the hanger attachment plate.

 Make sure the parts do not rattle.

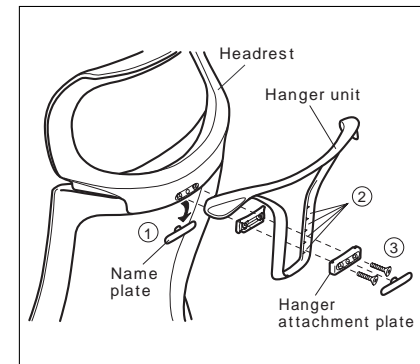

*Do not use the screw plate and screws provided for extra high back type.

Materials

Part		Main material
Structural parts	Base/frame	Die-cast aluminum
	Backrest shell	Polyamide
	Armrest	Pad: Polyurethane, Cover: Polypropylene
	Hanger	Polyamide
Cushion	Seat/ fabric upholstery	Molded polyurethane/polyester
Mesh material	Backrest	Polyester

Please check the table below before you assume the chair is broken.

Phenomenon	Possible cause	Solution	Page
The seat won't rise	You are operating it with your weight on the seat?	Operate with your weight off the seat.	3
	The seat is at the highest position?	The seat will not rise over the highest position.	3
The seat won't lower	You are operating it while sitting at the front edge of the seat?	Operate with your weight on the center of the seat.	3
	The seat is at the lowest position?	The seat will not lower beyond the lowest position.	3
The seat slide levers do not work.	You are operating with your weight on the seat?	Operate with your weight off the seat.	3
The backrest won't move.	The lever under the right side of the backrest is locked?	Raise the lever and lean against the backrest.	4
	The reclining tension adjustment knob at the rear of the seat is set to a "strong" position (turned in the forward [+] direction)?	Turn the reclining tension adjustment knob at the rear of the seat in the backward [-] direction.	4
The casters don't roll smoothly.	You are using the polyurethane casters on a rug or carpet?	Use nylon casters on a rug or carpet.	Contact the dealer or our sales representatives.
	Lint, wool waste or other foreign object is caught in the casters?	Remove the object or replace with new casters.	
The casters roll too much.	You are using nylon casters on a hard floor such as a plastic tile floor?	We recommend you use polyurethane casters.	
The chair makes an unusual sound.		Contact the dealer where you purchased the chair, or one of our branches.	



Printed on 100%
recycled paper



okamura

OKAMURA CORPORATION

INTERNATIONAL SALES & MARKETING DIVISION

Kokusai Shin-Akasaka Bldg. W., 10th Flr., 1-20, 6-chome, Akasaka, Minato-ku, Tokyo 107-0052, JAPAN

Tel : +81-3-5561-4085 Fax : +81-3-5561-4086

<http://www.okamura.co.jp/>

G93892 2005-10