

7. Specification

Main Materials and Surface Finish

Part		Material	
Structural parts	Backrest	Frame	Glass-reinforced polyamide >PA-GF<
		Frame for mesh	Polyamide >PA<
	Seat	Inner shell	Polypropylene >PP<
		Frame	Metal (steel)
	Support Base		Glass-reinforced polyamide >PA-GF<
			Metal (aluminum) >ADC<
	Leg		Metal (aluminum) >ADC< or Glass-reinforced polyamide >PA-GF<
		Adjustable Arm	Pad
	Body		Glass-reinforced polyamide >PA-GF<
	Headrest	Inner shell	Polypropylene >PP<
Attachment part		Glass-reinforced polyamide >PA-GF<	
Covering material	Mesh	Polyester	
	Cloth	Polyester	
Cushion material	Seat	Polyurethane >PUR<	
	Headrest	Polyester	

* Note that product specifications may change without notice in order to improve them.

Office Seating

Sylphy

Instructions for Use



Introduction

Thank you for purchasing Okamura product. Please store purchase history documents, such as a statement of delivery and a receipt in a safe place. In addition, carefully read this Manual before using the product.

Information on Harm Level

This Manual and the indications on the products show the degree of harm and damage to help you safely and correctly use the products, preventing you, people nearby, and properties from being damaged.

CAUTION Improper handling may cause injury or property damage.

Information on Graphic Symbols

This Manual and the indications on the products use various types of symbols. The symbols mean as shown below.

-  This symbol indicates a warning or caution.
-  This symbol indicates what you must not do.
-  This symbol indicates what you must do.

1. Safety Instructions

Failure to observe the following safety precautions may result in injury. Carefully read the following to understand the properties of this product before use.

CAUTION



Do not handle roughly, or use improperly.

- Do not use as a carrier.
- Do not stand on the chair or sit on the front side of seat or armrest.



Do not disassemble or repair on your own. Please contact our official dealers when needed.

No remodeling. Okamura will have no responsibility for any disadvantage caused by remodeling.



Gas lift replacement and handling should only be carried out by the trained professional.



Casters

- For hard floors made of ceramic, stone, tile or wood, use soft casters.
- For soft floors using carpet or rug, use hard casters.





1. Safety Instructions

CAUTION



Be careful not to get your fingers, hand or clothes caught in the gaps between the moving parts or the back of the pad when adjusting the position of the arm. Also, make sure that the arm are secured tightly before use.

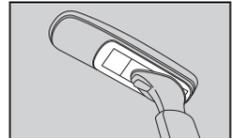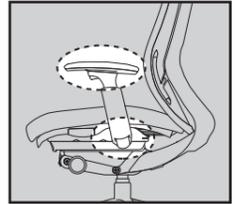

2. Instructions to Extend the Life of Product

Failure to observe the following handling precautions may result in damage or malfunction due to failure, etc. In that case, Okamura will not take any responsibility or liability for any phenomena caused.


Usage Precautions

Please follow instructions below. Failure may cause serious damage to the product.

- Indoor use only.



- Avoid high temperature, high humidity, or extraordinary aridity.

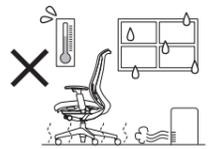

- No outdoor or waterfront use.



- Do not place product under heater or airconditioner exhausting high temperature air.



- Avoid direct sunlight.



- Do not place on uneven floor.



- When placing alongside windows, use curtain or blind to avoid from direct sunlight.




3. Part names



4. Operation guide

Adjustable range

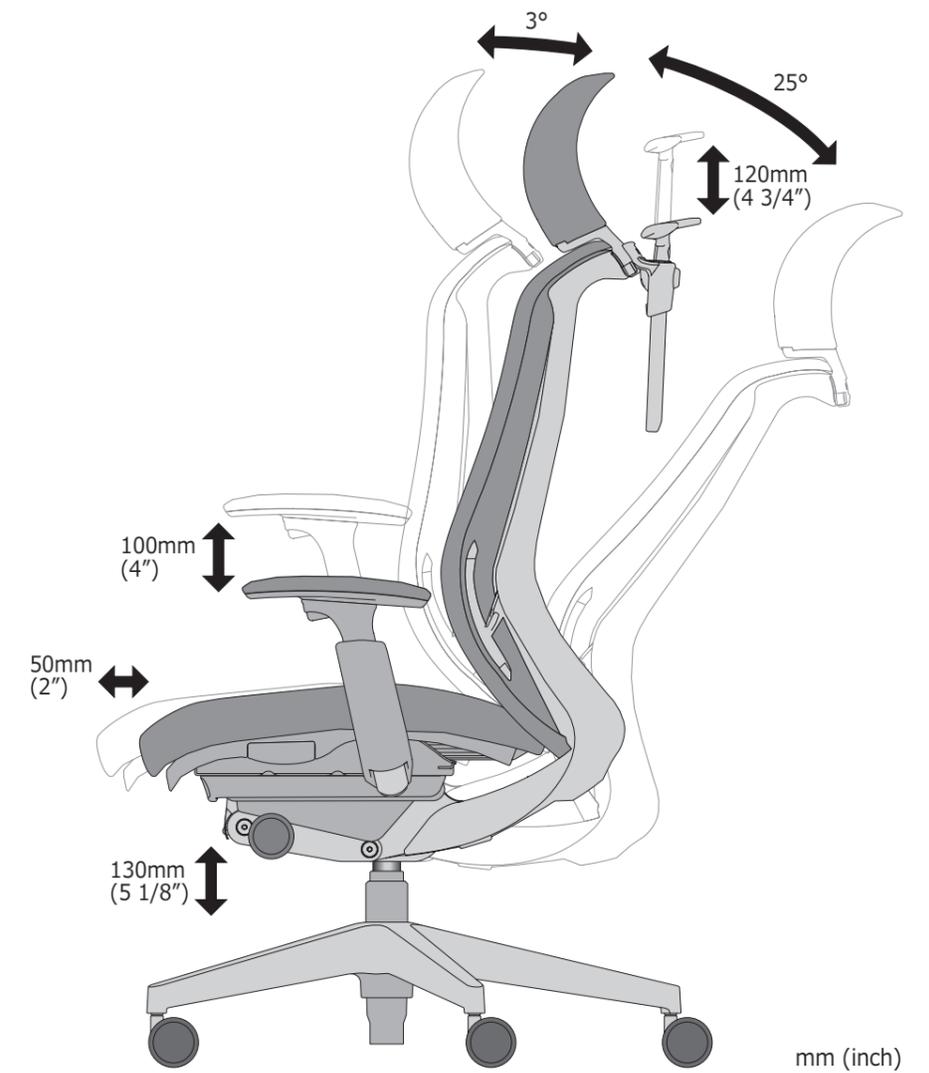


* The headrest, adjustable arms, and hanger are options.

4. Operation guide (continued)


Seat Height Adjustment

Adjust the seat height using the seat height adjustment lever on the bottom right of the seat. The seat will be lowered if you lift the lever while seated, and it will stop at any position you release the lever at. The seat will be raised if you lift the lever while not seated on the seat

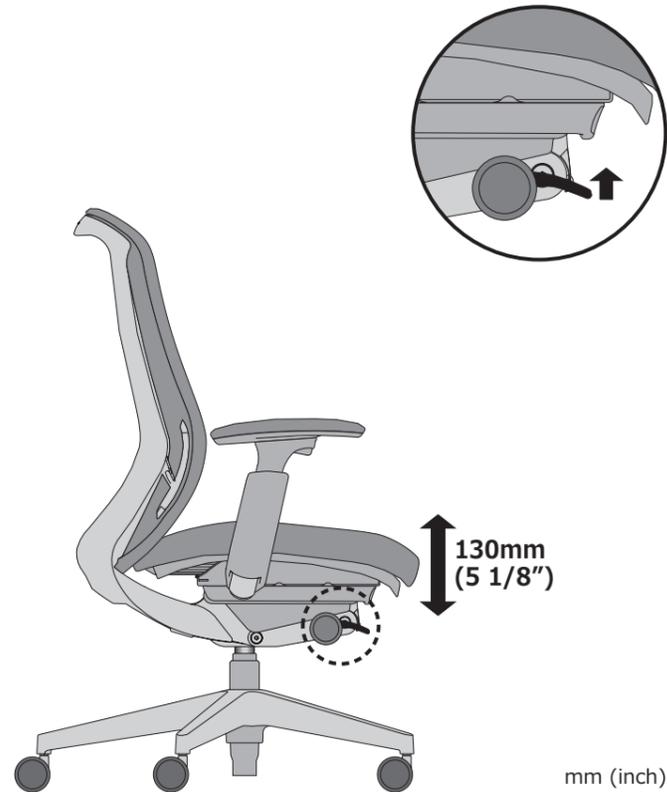

Seat depth adjustment

Adjust the seat depth by sliding the seat forward or back within a range of 50 mm (2") using the Seat slide lever on the bottom left of the seat. This allows for maintaining an appropriate distance between the back and the front edge of the seat, reducing pressure on the back of the knees and providing reliable support for the lower back.


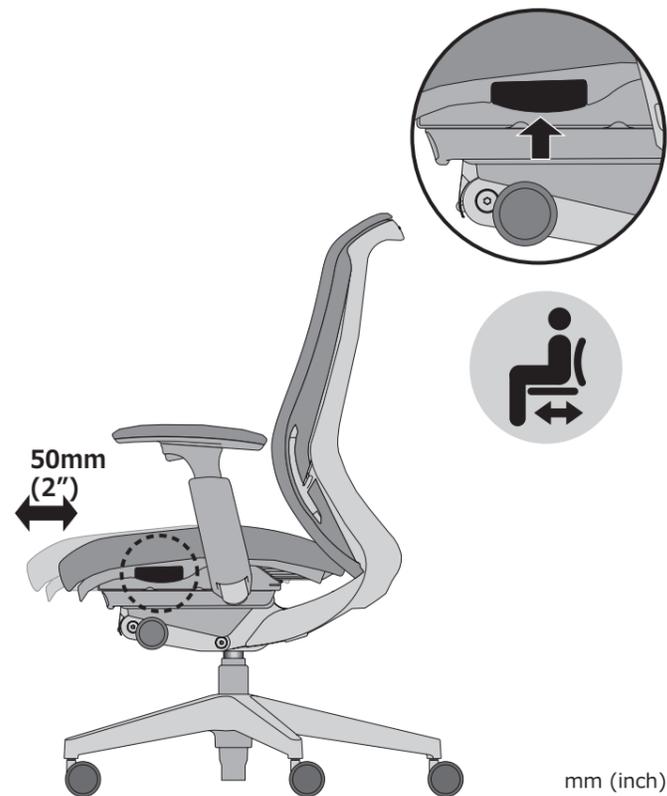


4. Operation guide (continued)

Reclining adjustment

Before adjusting the backrest recline, release the lock by using the reclining lock/release dial on the bottom left of the seat. Set the dial to (B) to recline the backrest. If you want to adjust the backrest recline to the front position, set the dial to (A). In (A), you can also adjust the backrest recline to the back position.


To lock the backrest recline, turn the dial clockwise once. After locking the backrest recline, you can release it by turning the dial counterclockwise once, and leaning against the backrest lightly.

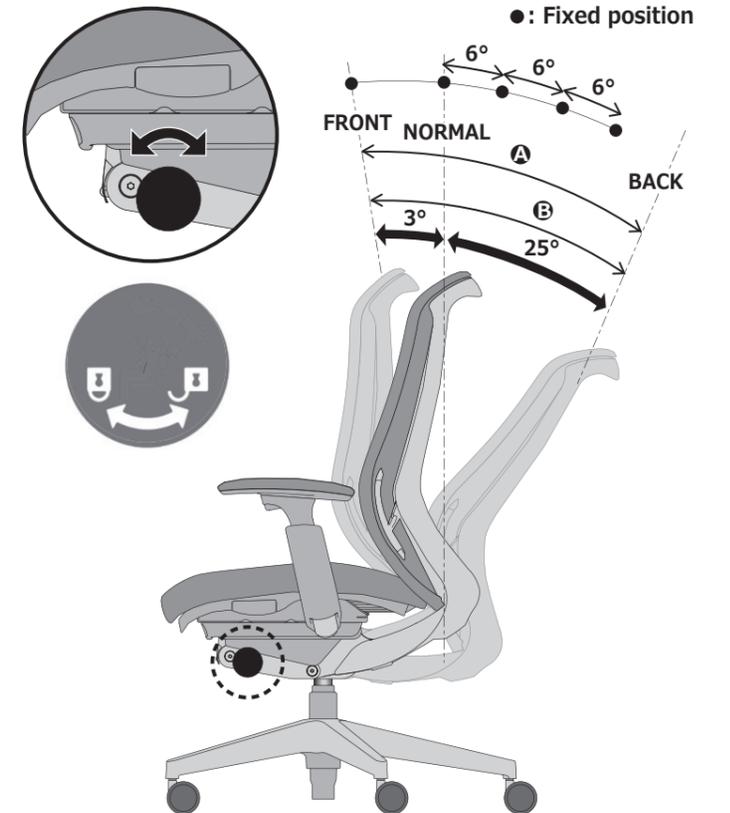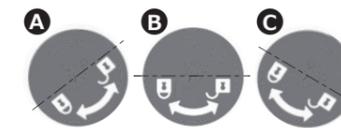

Dial position to lock and release the backrest recline


Turn the reclining lock/release dial to the (A), (B), or (C) position to lock and release the backrest recline.

Backrest recline to the FRONT position

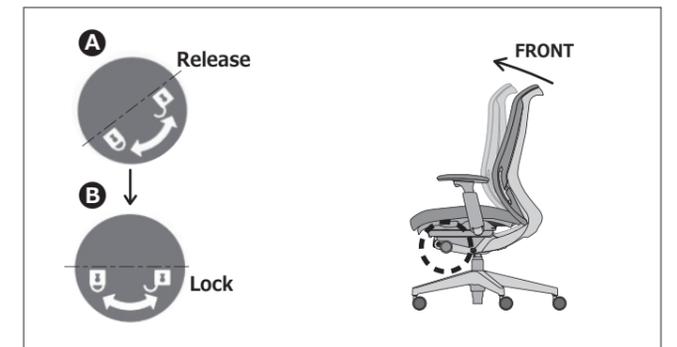

Backrest recline from the FRONT position to the NORMAL position

- (1) Turn the dial to (A) to release the lock.
- (2) Lean against the back to move the backrest recline backward, and turn the dial clockwise once to the (B) position.
- (3) Lift yourself to turn the backrest recline to the NORMAL position.

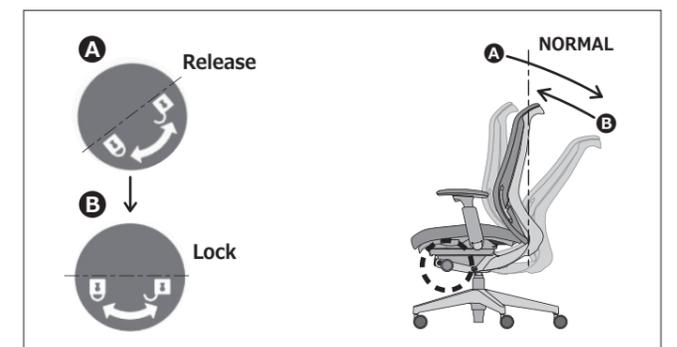

4. Operation guide (continued)


Dial position to lock and release the backrest recline (continued)

Backrest recline to the BACK position

The backrest recline can be adjusted within a range of 23°.

- Turn the dial to (B) to release the lock. If the dial is already set to (B), turn it to (A).
- Move the backrest recline to the BACK position.
- Turn the dial to (C) to lock the backrest recline.

* If you want to release the lock again, turn the dial counterclockwise once, and lean against the back lightly.

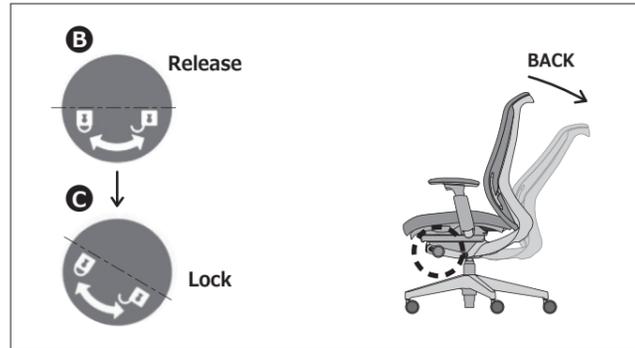

Reclining tension adjustment

Adjust the reclining tension by using the reclining tension adjustment dial on the bottom right of the seat.

The tension to the backrest will be increased if you turn the dial clockwise (+), and the tension will be decreased if you turn the dial counterclockwise (-). Adjust it so that it is comfortable.



4. Operation guide (continued)

Backrest curve adjustment feature


Adjust the reclining tension by using the reclining tension adjustment dial on the bottom right of the seat.

The tension to the backrest will be increased if you turn the dial clockwise (+), and the tension will be decreased if you turn the dial counterclockwise (-). Adjust it so that it is comfortable.



Adjustable arm (option) height adjustment

The backrest curve will be loosened (A) if you pull down the levers on both sides of the backrest, and the curve will be tightened (B) if you pull up the levers. Adjust the curve so that your back comfortably fits the backrest.

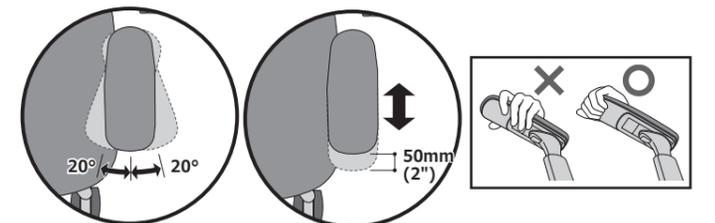

Notes


- * When rotating the adjustable arms, make sure to hold the edge of the arms.
- * Before using this product, make sure that the position is securely locked after making the adjustment.



4. Operation guide (continued)

Hanger (option) height adjustment

Adjust the Hanger by pushing the button. The Hanger can be moved up and down within a range of 120 mm (4 3/4"). The Hanger can also be set in a position where it is out of the way when not in use, allowing for a clean appearance. If you use the Hanger with the low-backrest seat, adjust the Hanger to the highest position.

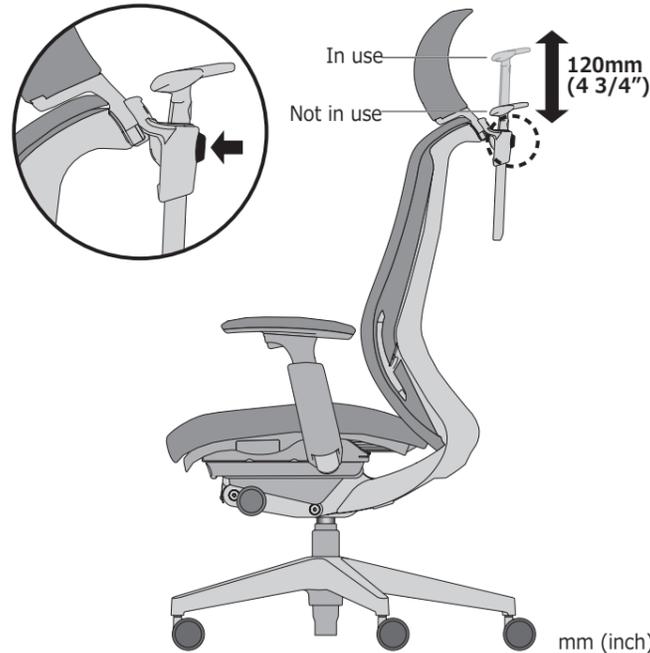

Notes

* Before using this product, make sure that the position is securely locked after making the adjustment.

5. Troubleshooting

Problem	Check	Solution	Page
The seat cannot be lifted up.	Are you sitting on the seat when adjusting the seat height?	Adjust the seat height while not seated on the seat.	5
	Is the seat height in its highest position?	The seat cannot be lifted up beyond the highest position.	
The seat cannot be lowered.	Are you sitting on the front edge of the seat?	Sit in the center of the seat while adjusting.	6
	Is the seat height in the lowest position?	Adjust the seat depth while not seated on the seat.	
The seat slide lever does not work.	The dial on the bottom right of the seat is locked.	Turn the dial counterclockwise, and lean against the backrest.	6
The backrest does not recline.	The dial on the bottom right of the seat is locked.	Turn the dial counterclockwise, and lean against the backrest.	6
	The reclining tension adjustment dial is set to the strong tension (back) position.	Turn the reclining tension adjustment dial to Weak (counterclockwise).	7
Casters do not move smoothly.	Are they tangled with lint or wool?	Remove lint or wool or replace the casters.	*
Casters are slippery.	Are you using urethane casters on hard floors such as a plastic tile floor?	Use soft casters.	
Chair makes noise.	-	Visit a retail shop or the nearest branch.	

* Please contact an official dealer.


6. Instructions to Extend the Life of Product

For maintenance

- Regular maintenance is for long product life.
- If found unstable due to loose bolts and screws, tighten them.
- For daily care, use a well-wrung soft cloth.
- For stained part, use neutral detergent (1-3%) and completely remove detergent with dry soft cloth.



- For mesh and cushion parts, remove dust by tapping the cloth surface with brush or using vacuum cleaner.
- Cushion cannot be dry-cleaned. Replacing is recommended if exceptionally dirty.

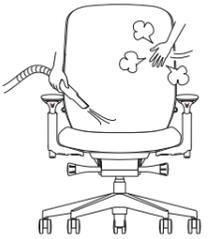

Daily care

[Cloth part]

- Brush with a soft brush or tap the surface softly and vacuum to remove dust to avoid damaging the cloth.
- When it gets dirty after extended period of time, wipe with a well wrung soft cloth moistened with thin neutral detergent. Wipe clean with a damp cloth. Be sure to wipe detergent completely and wipe again with a dry cloth to dry it.
- When using alkaline electrolyzed water to remove stains, spray directly on the stain and brush with a soft brush taking care not to damage the cloth. Then, wipe the moisture and stain to remove and wait for the cloth to dry.
- When it gets an oily stain, dab and remove it by using a dedicated stain remover immediately. Then wipe with a soft cloth dampened with water, followed by a dry cloth to dry. Stains may be permanent depending on the material.

Please be careful.

Do not leave the product with moisture remaining on it. Do not clean the product with organic solvents such as thinner or benzene, or with a cloth that contains chemicals. Be aware that once discoloration or deterioration happens, it cannot be reverted to its original state.

[Aluminum part]

- Wipe off with a dry soft clean cloth.
- Immediately wipe off any water.
- Immediately wipe off any dust or fingerprints (sebum).

[Resin Part]

- Wipe with a well wrung soft cloth moistened.
- If dirt is noticeable, wipe it off with a well wrung soft cloth moistened with thin neutral detergent. Be sure to remove detergent completely with a damp cloth and wipe again with a dry cloth to dry it.